 


 Reinsert the reset tool but change its direction (see diagram below).
 Reinstate Tip B and Tip C to the lock.



 Press the reset tool into the reset button hole firmly. At the same time, turn the dials to set the new combination.



 
C. FUNCTIONS

 
P.S.:You can also use a sharp object to push the reset button all the way to set new combination.

1-1. Use any end of the long cable to go through handle on your luggage, then insert into the lock.



Attach the lock on fixed objects to secure your belongings.





Release cable Tip B and Tip C, it could be used as a small padlock.




info@smartgo.club www.smartgo.club © SmartGo Worldwide Inc.



## Smar†Go
 
## 使用說明書

## A. 各部名稱




## B. 密碼設定方式 出版密碼設定000

 轉動字輪000至對號點位置,取下A端 鋼索即開鎖。



  將變號塊移動遠離鎖具(如圖),並取下 B端鋼索及C端鋼索。



3. 將變號塊改變位置及方向(如圖),且將 B端鋼索及C端鋼索組入鎖具。

 


 將變號塊緊貼鎖具並持續壓持(如圖), 轉動字輪設置您的新密碼, 鬆手即完成 密碼設置。




**C. 使用方式** 註: 如用類似原子筆尖端之工具朝變號位置 插入到底, 轉動字輪亦可設定密碼。


1-1. 將長鋼索任何一端穿過皮箱把手並 插入鎖體。



1-2. 將鋼索A端穿過拉鍊片並插入鎖體, 轉動字輪至非密碼即上鎖。

 

 2. 如圖可將旅行箱鎖在固定物。



 可將鋼索B端C端卸下即可當一般掛鎖 使用。

